



SARENNA MARBLE TOP AND BASIN, FITTING INSTRUCTION.


1. THE UNIT IS NOW FIXED TO THE WALL. ENSURE IT IS LEVEL IN ALL PLANES PRIOR TO FITTING THE MARBLE TOP AND BASIN

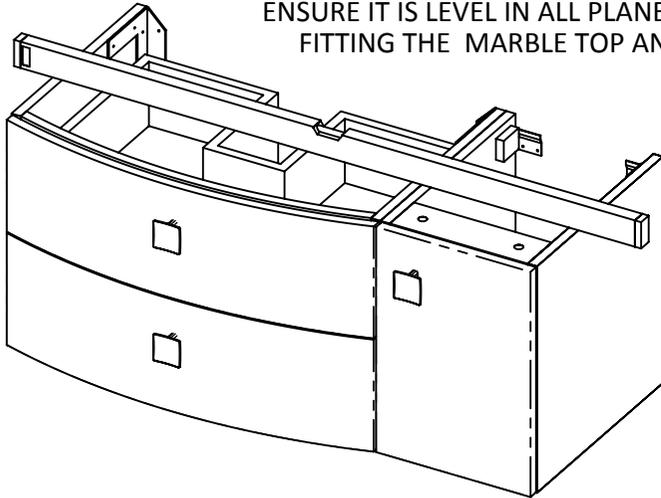

2. MARK A CENTRE LINE ON TAPE TO DIMENSION SHOWN

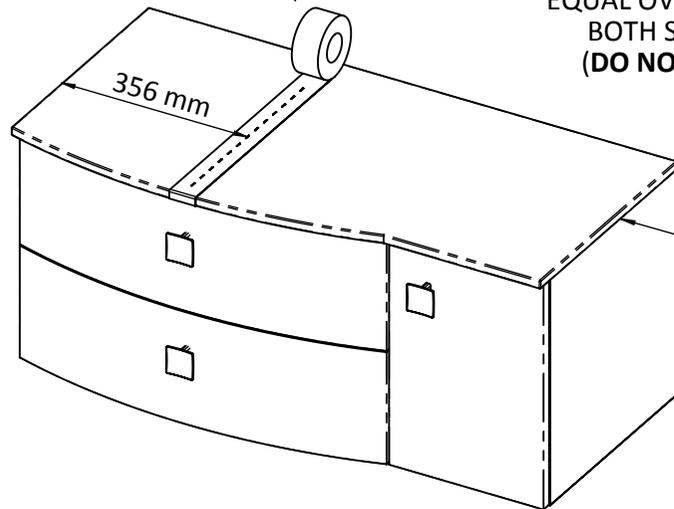


3. PLACE THE MARBLE ONTO THE UNIT WITH EQUAL OVERHANG BOTH SIDES. (DO NOT FIX)

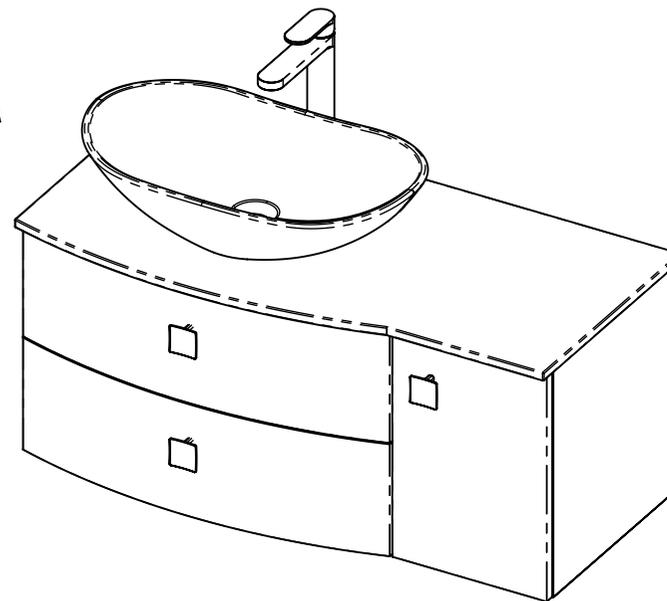


4. PLACE THE TAP AND BASIN IN THE DESIRED POSITION. THE BASIN WASTE CENTRE CAN BE **NO MORE THAN 270mm** FROM THE BACK EDGE

5. NOW MARK POSITION OF BASIN WASTE AND TAP CENTRE ON THE TAPE. THEN REMOVE MARBLE TOP FOR DRILLING.

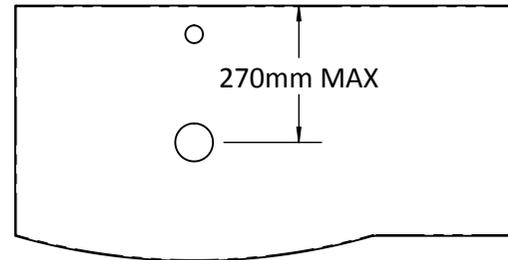

6. DRILL MARBLE $\phi 35$ FOR TAP AND $\phi 75$ (MINIMUM) FOR BASIN WASTE ON A SUPPORTED SURFACE. USE DIAMOND CUTTER WITH COOLANT AS REQUIRED

7. FULLY FIT AND SEAL WASTE TO BASIN

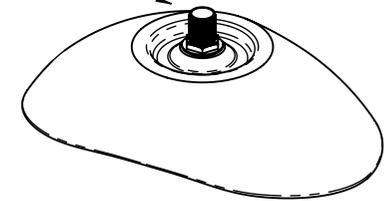

8. NOW REFIT AND SECURE THE MARBLE TOP USING SEVERAL SMALL BLOBS OF SILICONE ON THE UNIT TOP. ENSURE IT IS CENTRALISED.

9. FIT TAP, THEN BASIN. USE A SMALL AMMOUNT OF SILICONE TO SECURE BASIN IF DESIRED.

NOW ALLOW SILICONE TO FULLY DRY.

