



WRC WET ROOM CURVED SCREEN FITTING INSTRUCTION

1.

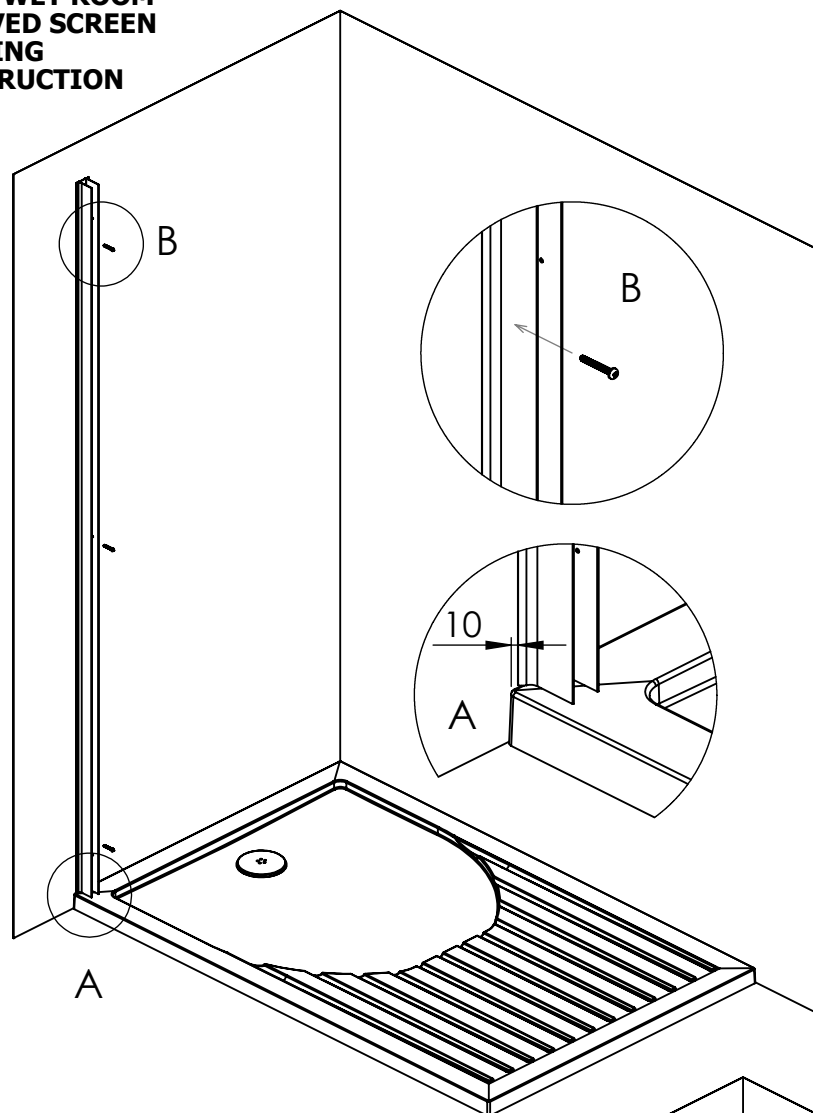


1. Fit the shower tray ensuring it is level across all areas.
2. Apply silicone sealant to the edges of the tray after tiling.
3. Take the wall channel and position 10mm from the front edge of the tray. Ensure the wall channel is plumb and mark the fixing points. Drill the wall for the supplied wall plugs (x6) taking care to avoid any hidden pipes or electrical cables.
4. Fix the wall channels with the long screws provided. (x6)

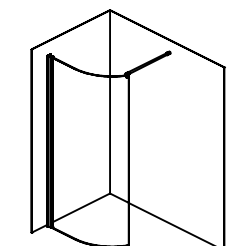


SCREEN CAN ALSO BE
FITTED WITHOUT A TRAY

2.

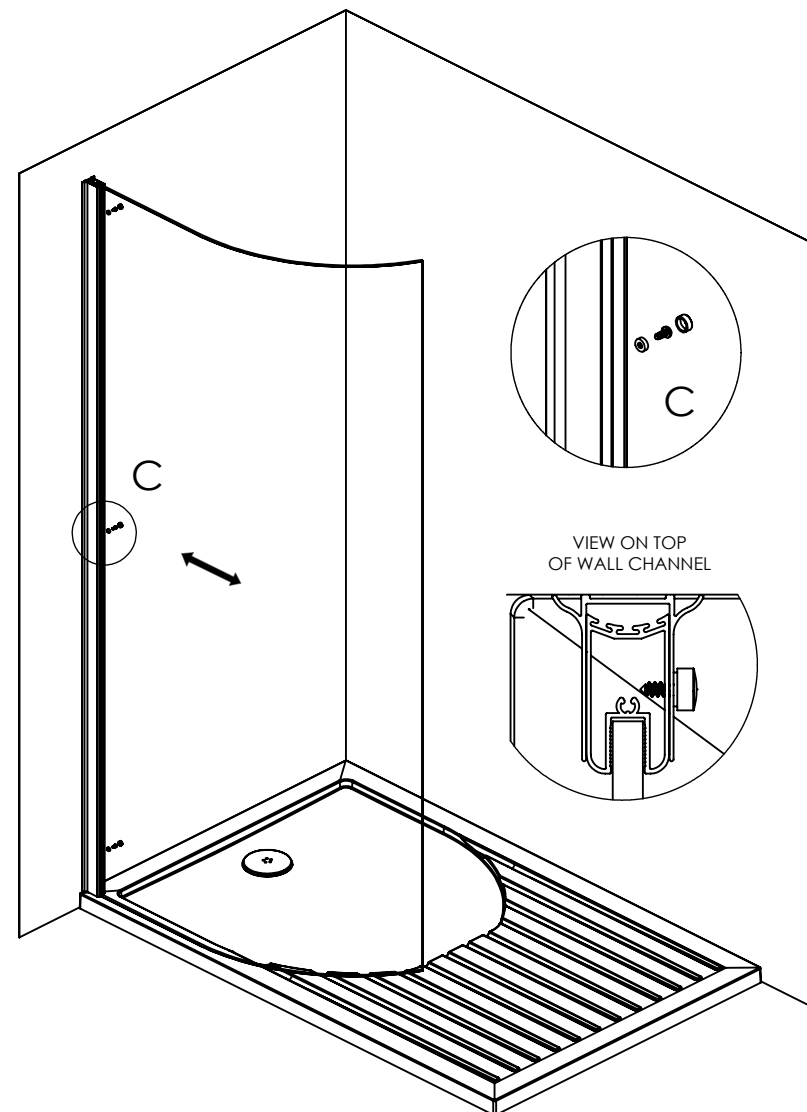


5. Ease the glass panel into the wall channel and adjust the glass panel in or out so it follows the form of the curve on the tray
6. Using a 3mm drill bit, drill through the wall channel on the inside of the enclosure, approx' 100mm from the top & bottom and also centrally. Be careful to drill into the cavity only and not into the glass.
7. Fix together using the 10mm long screws, along with the cover cap washers. (x6)

3.

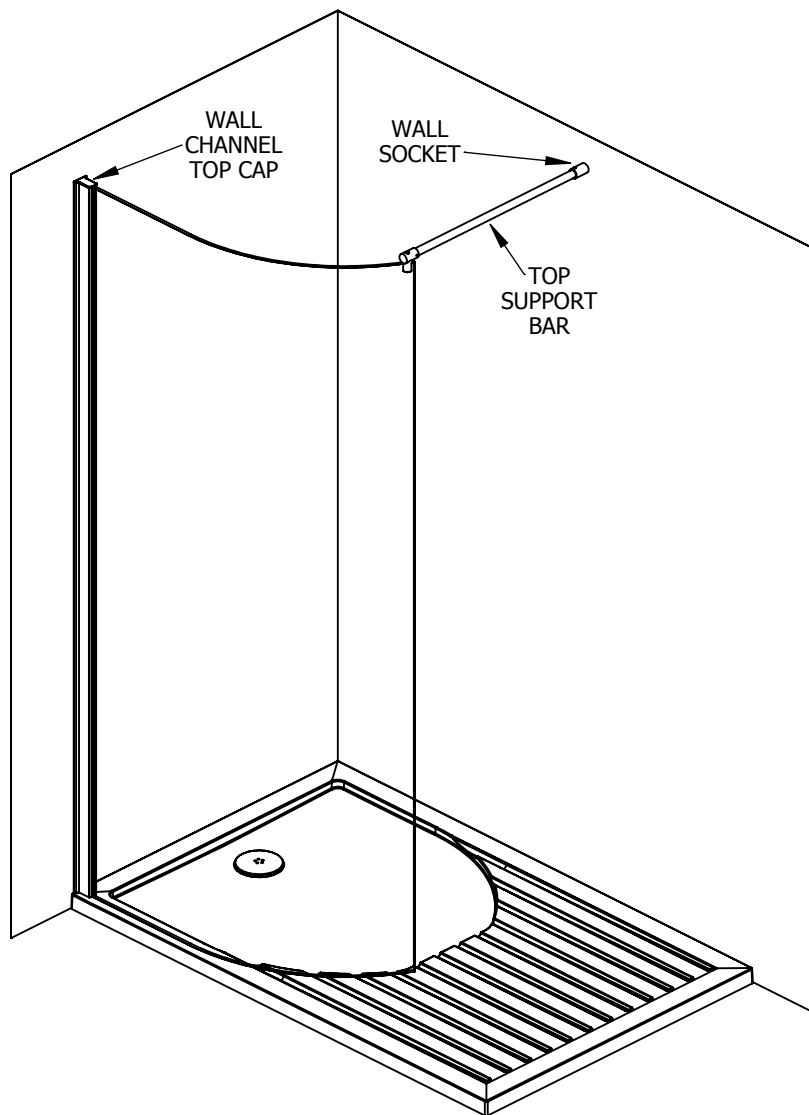

8. Make sure the glass is parallel to the front edge of the tray.
9. Fit the top support bar to the glass as shown and cut the tube to required length.
10. Making sure all is plumb and true, mark the center of the top bar socket on the wall, remove top bar from glass, then drill and plug the wall.
11. Fit the top support bar wall socket and refit the top support bar to the screen.
12. Fit the wall channel top cap

4.

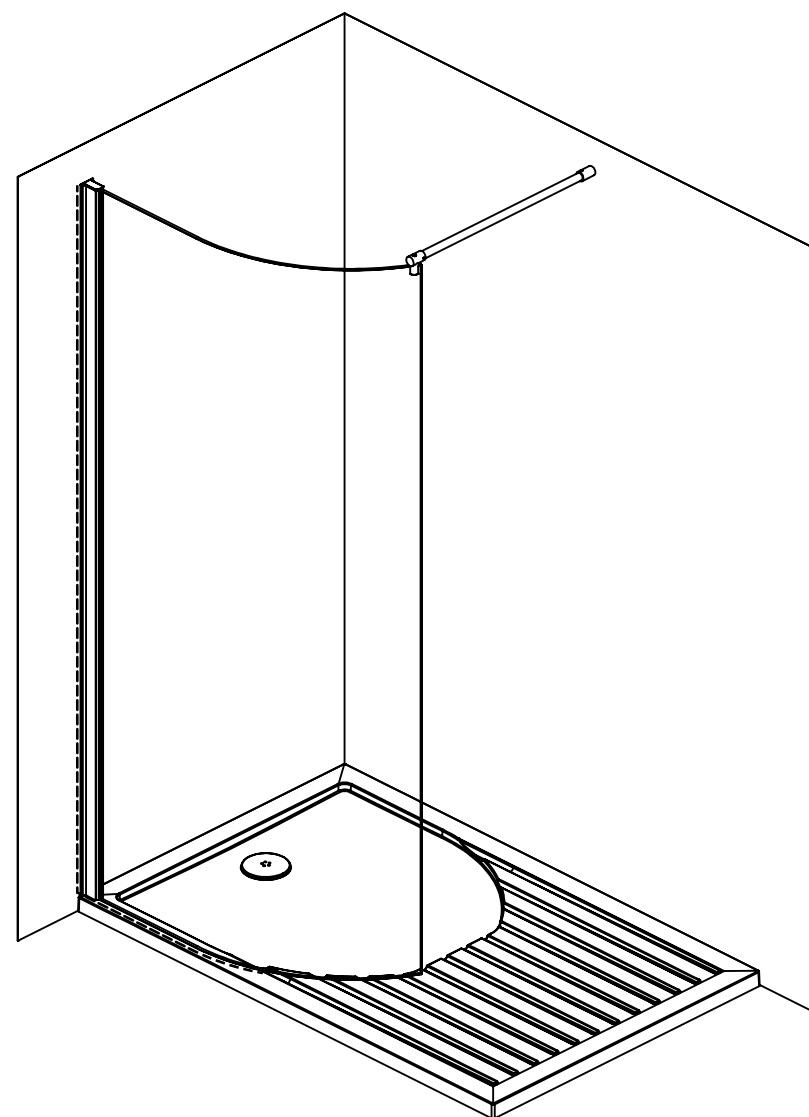

13. Externally silicone the full height of the screen where it meets the wall and along the bottom of the glass where it meets the tray as indicated -----
14. Silicone must be allowed to cure before using the shower.
15. Optional end panel is fitted in the same way.